

Inline Pump Installation Guide



Outlet



Note:
Teflon tape is
wound around
thread of fitting



Inlet



Inline pumps are an internal & external pump which can be used submerged or at the rear of the self-contained water feature.

1. Remove 90° elbow fitting that connects pipework at rear of waterfall.

2. Ensure filter casing has been removed from the pump.

3. Using teflon tape (provided) cover thread of both inlet & outlet section of your pipe fittings to alleviate leakage.

DO NOT overtighten thread into pump as you may crack the pump casing.

4. Set pump adjacent to pipework at rear of self-contained unit. Measure your pipework & mark with a marker pen so it overlaps the inlet and outlet sections of the threaded fitting.

5. Once this is done, cut pipework & connect to pump ensuring pump is aligned properly. Pump must sit flat behind pond depth.